













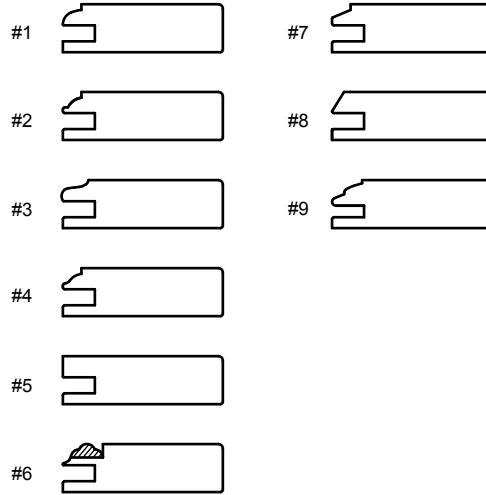


## Panel Profiles

	flat panel		raised panel
scoop #8		scoop #1	
cove #10		bubble #2	
pillowed #12		bevel #3	
beaded #16		step scoop #4	
		1/4" bead #5	
		linki #6	
		bubble/bead #7	
		step scoop #13	
		slant #14	
		straight #15	

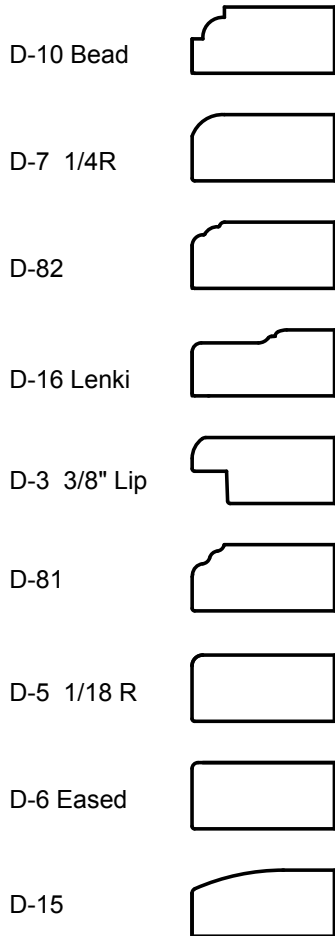
## *Inside Edge Profiles*

cope & stick

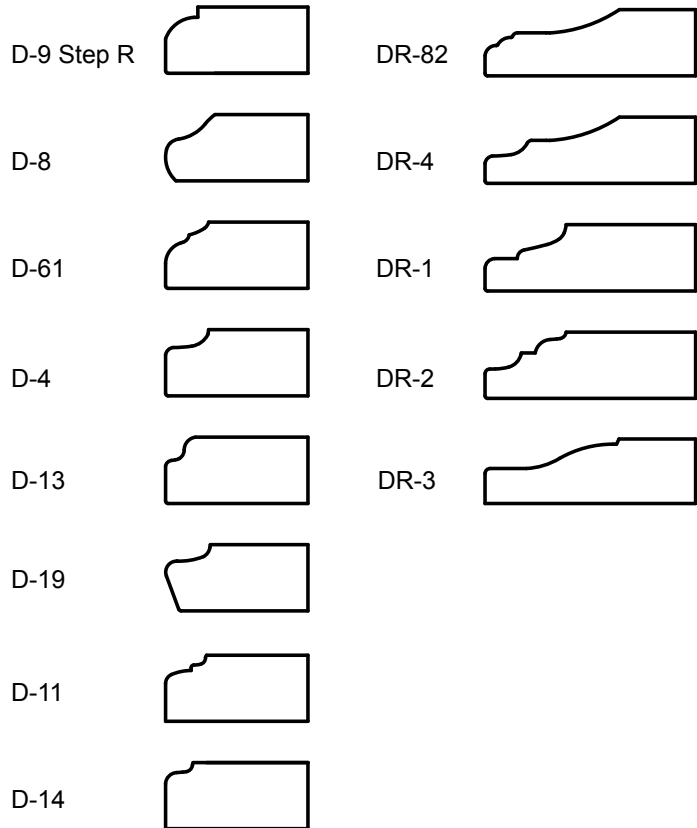


## Outside Edge Profiles









































### std door edges



### raised drawer front



# Miter Door Styles

DOOR STYLE		DRAWER STYLE		DOOR STYLE		DRAWER STYLE	
M17	 2 7/8"	M17	 2"	M27	 3"	M27	 2 1/4"
M18	 2 7/8"	M18	 1 3/4"	M28	 2 1/4"	M28	 2 1/4"
M19	 3 7/8"	M19	 2"	M29	 2 3/4"	M29	 2"
M20	 2 7/8"	M20	 2 1/4"	M30	 3"	M30	 1 3/4"
M21	 2 7/8"	M21	 2"	M31	 2 1/2"	M31	 2"
M22	 2 1/2"	M22	 2"	M32	 2 7/8"	M32	 2"
M23	 2 1/4"	M23	 2 1/4"	M33	 3"	M33	 2"
M24	 2 1/2"	M24	 2"	M34	 2 1/2"	M34	 2"
M25	 2 1/2"	M25	 2"	M35	 2 1/2"	M35	 2"
M26	 2 1/2"	M26	 2"	M36	 3"	M36	 2"